


ECO Valve Gauge Port Options

Please use our gauge port diagrams below to ensure that the gauge port positioning matches the **flow direction** and design of your system.

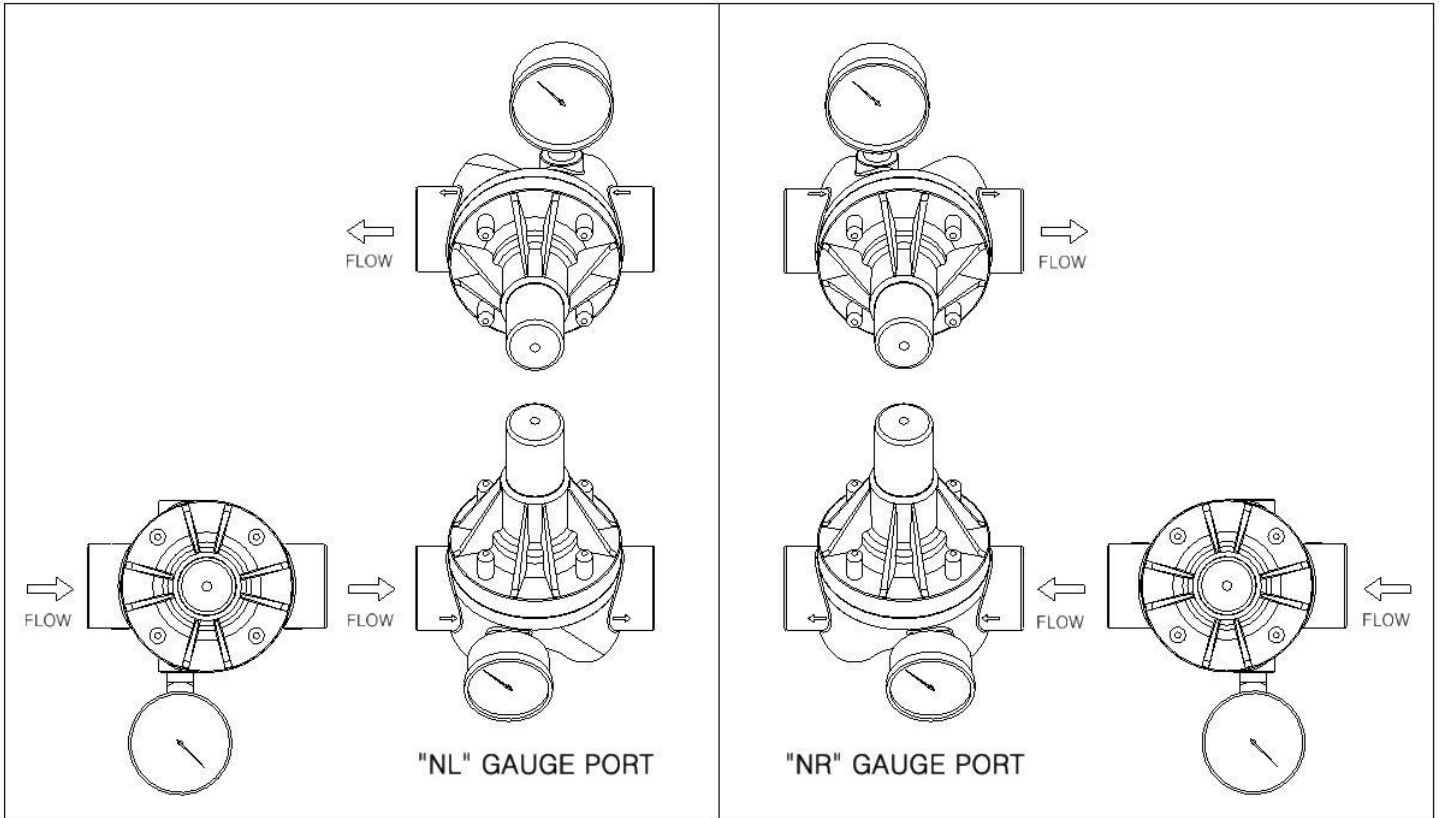

The gauge is always placed on the intake side of the back-pressure valve. If your system configuration matches one of the three options on the left, then -NL is the product code to use on your PO. If your system configuration matches one of the three options on the right, then -NR is the product code to use on your PO.

Should you have any questions or require assistance, please do not hesitate to call or e-mail one of our Technical Sales Representatives. We are happy to help you find the right sizing and materials for your project.



**PRIMARY FLUID
SYSTEMS INC.**

Tel: (905) 333-8743
Fax: (905) 333-8746
North America Toll Free – 1-866-324-6422
E-Mail: sales@ecovalve.ca
<http://www.ecovalve.ca>